

Inveo Sp. z o.o.

# LanTick, Nano, IND, RCP

Instruction Manual

# Firmware update

The module is equipped with the possibility of firmware updates. Firmware is delivered in form of a `.bin` file.

## To conduct the firmware update:

1. Go to the **Administration** tab.
2. Select **Enable TFTP Bootloader**.
3. Start the Windows command line (Start > Run > cmd > Enter).
4. Go to the catalogue where the `.bin` file is located.
5. Type in the command: `tftp -i <ip_address> PUT file.bin`, where:
  - `<ip_address>` is the module's IP address,
  - `file.bin` – firmware update file.

```
WybierzWiersz polecenia

Microsoft Windows [Version 10.0.19045.5965]
(c) Microsoft Corporation. Wszelkie prawa zastrzeżone.

C:\Users\PC>tftp -i 192.168.22.99 PUT release.bin
Transfer successful: 345664 bytes in 135 second(s), 2560 bytes/s
```

### Information

- The programming takes around 2 minutes to complete.
- File transferred confirms that programming is completed.
- It is recommended to revert the device to factory settings after a firmware update.\*\*